


## FITTING INSTRUCTIONS FOR ROOF RACK WIND DEFLECTOR

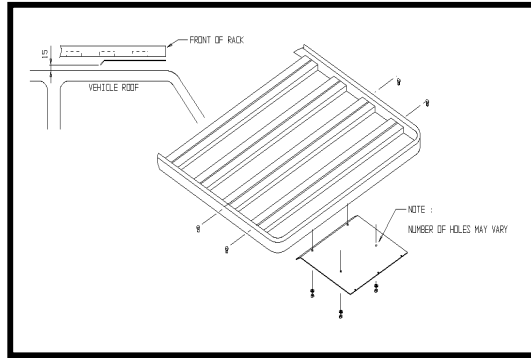


- Fit deflector as shown to the first and second cross slat on the roof rack at the front of the vehicle.
- Slide bolt heads into groove on underside of slats.
- Fit deflector plate over bolts and fit nuts and washers hand tight.
- Position deflector in centre of rack across the vehicle and push the deflector forward until the leading edge of the deflector is in line with the front cross member of the rack as shown in the inset diagram.
- Tighten nuts.
- Using a 5 mm drill, spot through the three holes on the leading edge of the deflector and drill through into the aluminium section.
- Fit the three pop rivets

**IMPORTANT: Ensure 15 mm clearance is maintained between Wind Deflector and vehicle roof otherwise damage to roof may occur. Bend Wind Deflector by hand if necessary.**

## ROOF RACK ALUMINIUM LEG ASSEMBLY INSTRUCTIONS

Item.	Qty.	Description
1	1	Gutter Clamp
2	1	M 8 Lock Nut
3	1	Grub Screw M8 x 20
4	1	Flat Washer Ø 19
5	1	Spring Washer
6	1	Hex Nut M8
7	2	Nyloc Nut M8
8	2	Flat Washer
9	2	Hex Head Bolt M8 x 25
10	1	Cross Slat
11	2	Aluminum Leg

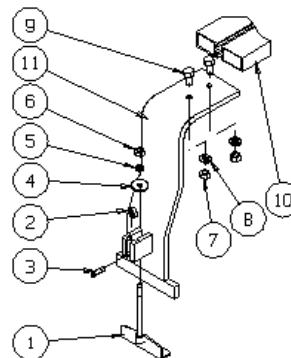

- Insert 2 off M8 x 25 mm bolts, item 9 into underside slot of cross member, item 10.
- Install leg assembly; item 11 to underside of cross member, fastening with washers and M8 Nyloc nuts. Tighten finger tight ensuring that leg can slide freely along cross member.
- Repeat installation of other leg on the other end of the cross member.
- Lower roof rack onto roof of vehicle in required position, ensuring that the legs locate in the gutter on either side of the vehicle. Centralize the cross member on roof rack and tighten the M8 nuts, item 7.
- Insert nut Item 2 into clamp block on roof rack leg, insert grub screw Item 3 through hole in clamp block and screw into square nut.
- Insert clamp Item 1 through clamp block from underneath.
- Install flat washer and spring washer Items 4 & 5 and fit nut to end of Item 1.
- Hands tighten grub screw Item 3 and then tighten nut Item 6 until clamp is firmly held. **DO NOT OVER TIGHTEN** – stop when spring washer is flattened.
- Lock clamp in position by tightening the grub screw Item 3.